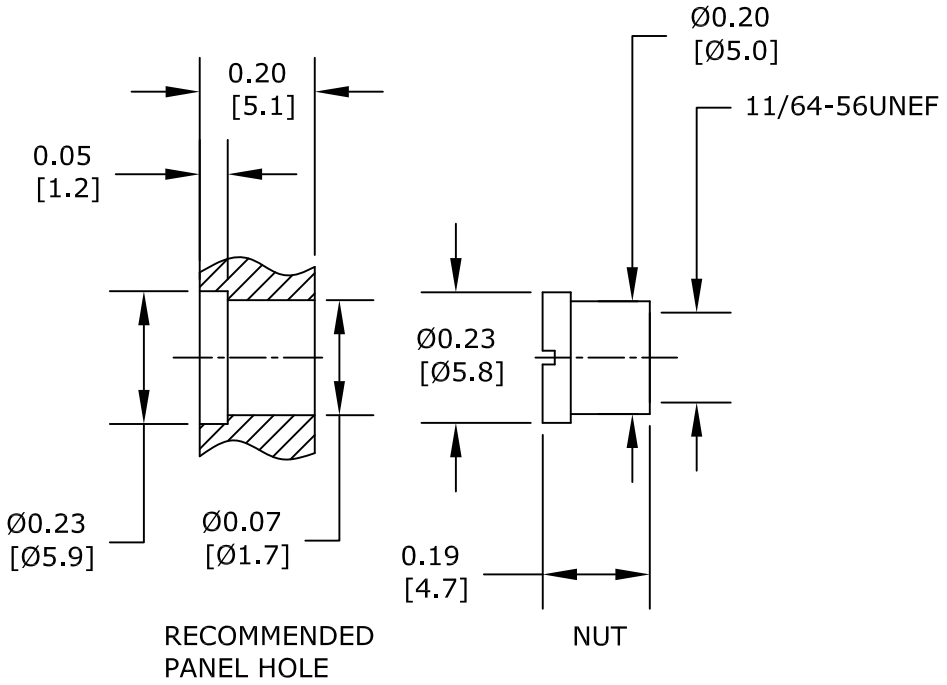

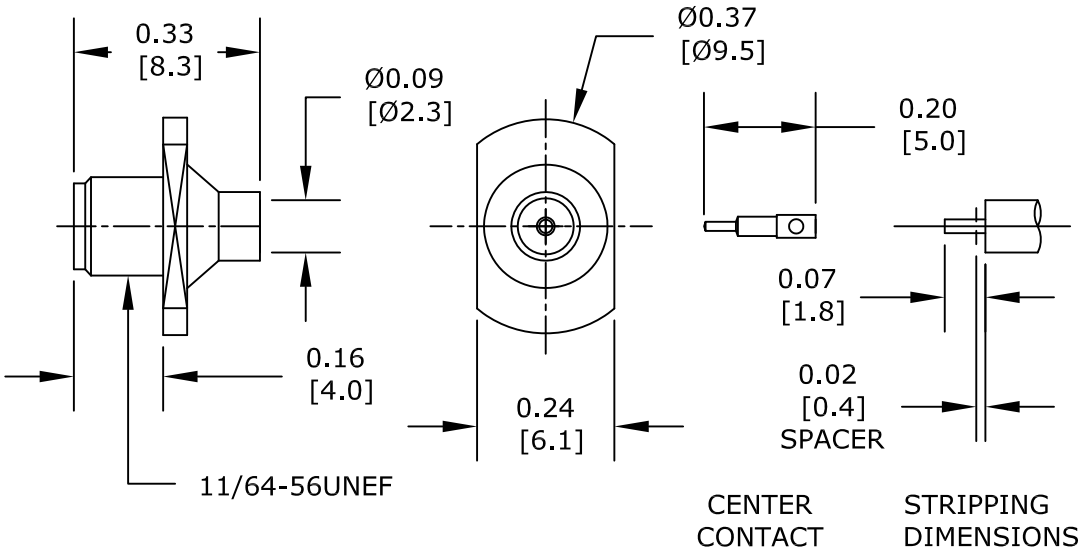

ASSEMBLY PROCEDURES

1. STRIP THE CABLE TO THE DIMENSIONS SHOWN, DO NOT NICK CENTER CONDUCTOR.
2. INSERT THE CENTER CONDUCTOR INTO THE CONTACT USING THE SPACER. SOLDER THE CONNECTION. REMOVE THE SPACER AND ANY EXCESS SOLDER.
3. INSERT CONTACT INTO THE BODY UNTIL IT SEATS.
4. SOLDER OUTER CONDUCTOR TO THE BODY.

FAIRVIEW MICROWAVE INC. ALLEN, TX 75013 WWW.FAIRVIEWMICROWAVE.COM	NOTES: 1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL. 2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME. 3. DIMENSIONS ARE IN INCHES [mm].				
TITLE	DWG NO FMC01053		CAGE CODE 3FKR5		
	CAD FILE 102715	SHEET	SCALE N/A	SIZE A	2233