


STRIPPING DIMENSIONS

## ASSEMBLY PROCEDURES:

- STRIP CABLE AS SHOWN & CHAMFER CENTER CONDUCTOR.
- SLIDE FERRULE OVER CABLE. INSTALL CABLE INTO BODY OF CONNECTOR, PUSH UNTIL IT SEATS IN PLACE.
- 3. SLIDE FERRULE FORWARD AND BUTT AGAINST CONNECTOR SHOULDER, THEN CRIMP FERRULE.

CRIMP SIZE REQUIRED:

FERRULE: .610" [15.5] HEX. CRIMP TOOL.

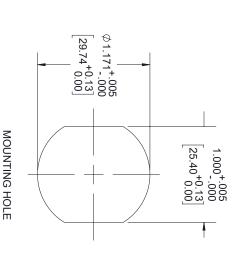

Fairview Microwave THESE COMMODITIES, TECHNOLOGY OR SOFTWARE WERE EXPORTED FROM THE UNITED STATES IN ACCORDANCE WITH THE EXPORT ADMINISTRATION REGULATIONS. DIVERSION CONTRARY TO U.S. LAW PROHIBITED. UNLESS OTHERWISE SPECIFIED LEADING DIMENSIONS ARE INCHES



TITLE

A SIZE	ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY.	X = ±.2 [5.08] FRACTIONS XX = ±.02 [.51] ± 1/32 XXX = ±.005[.13] ANGLES ± 1° 12 [30.6] < L ≤ 50.0 [162.4] = 4.7 [0.2] / -0 20.0 [30.6] < L L ≤ 30.0 [762.0] = 4.6 [162.] / -0 30.0 [762.0] < L = ±5%L / -0			UNLESS OTHERWISE SPECIFIED LEADING DIMENSIONS ARE INCHES DIMENSIONS IN [] ARE MILLIMETERS
CAGE CODE				TOLER	
R5				TOLERANCES:	
DRAWN BY K.GLEBOVA				CABLE LENGTH (L) TOLERANCES	
ITEM NO. FMCN				(L) TOLERANCES:	
FMCN1836 REV	SCALE N/A	SHEET OF 1	FAIRVIE	THE INFORMATION AND	THIRD-ANGLE PROJECTION